

NOTE

For Iconic V1 Electric Fires: When your fire is ON, the heat will switch on if your room falls below 16c (or below the temperature set).

If you would like to turn off this function, please turn off the fire and hold the speaker button for 4 seconds. The temp screen should move from OFF to ON. This can be reversed by repeating the same procedure. Please see instructions for more details.



By
Heat Design

Models: 750 / 1000 / 1250 / 1600/ 2000

Please read the instructions carefully before installation and keep for future reference.

Please Note:

This product is for a well insulated dwelling.

Table of Contents

- 1 Important Electrical safety**
- 2 Technical Specifications / Appliance Dimensions**
- 3 Components**
- 4 Operating Instructions**
- 5 Maintenance**
- 6 Warranty**

1

Important Electrical safety

Read all instructions fully before using this electric fire.

This electric fire is for **INDOOR USE ONLY**.

Do not locate the fire below or in front of a fixed socket outlet.

Warning **DO NOT COVER** the fan heater air inlet / outlet as it could cause possible fire. Note the warning symbol on the fire.

Do not use the fire near a bath / shower / swimming pool.

Do not use the fire in area's where gasoline / paints / flammable liquids are stored, as they may catch fire.

This appliance must be securely fixed / recessed to an internal wall in the property. Keep all furniture / curtains etc as least 1 meter away from the fire.

The fire must be earthed.

After the fire's installation the plug must be accessible.

Always disconnect the power supply before any cleaning / maintenance of the appliance. Ensure the appliance is cool before proceeding.

If the power cord is damaged, it must be replaced by a qualified electrician or manufacturer service technician.

Do not run the power cord under a carpet / rug etc. Always ensure it is routed securely and it is not a trip hazard. Ensure the power cord is kept away from hot surfaces and areas.

Young children under 8 years old must always be supervised and must not play with the fire. The appliance is not a toy. Do not throw anything at the glass or strike the glass of the appliance.

The appliance must not be used by young children or the infirm, ensure a fire guard is fitted to protect from burns as the fire can get very hot.

The appliance must not be used through an external switching device such as a timer or connected to a circuit that is regularly on and off by a utility.

Do not use the appliance to dry clothes.

Do not use the appliance in small areas where there are persons are uncappable of leaving the area on their own, unless there is constant supervision.

This appliance is supplied with a 13Amp 3 pin moulded plug. The fire must only be connected to a 220/240V ac supply 50/60 Hz. Please note the main power lead wires are coloured coded to UK and Irish standard, see below.

Green / Yellow (Earth / E \perp)

Blue (Neutral / N)

Brown (Live / L)

Do **NOT** operate the appliance if it is damaged.

2

Technical Specifications

Heat Output per model

Models	750	1000	1250	1600
Maximum heat output	1500 W	1500 W	1500W	1500 W
Minimum heat output	750 W	750 W	750W	750 W


Voltage supply 220 / 240V 50/60Hz

Power usage for LED lighting / per model

Models	750	1000	1250	1600
Flame LED output	12 W	9.6 W	13W	15 W
Fuel Bed LED output	8 W	12 W	15W	18 W
Down lighting LED output	3 W	4 W	5W	6.6 W
Front LED pulsing lights output	1.5 W	1.5 W	1.5W	2.0 W
Mood LED lighting output	9.6 W	9.6 W	9.6W	9.6 W

Appliance Dimensions

Unit: mm

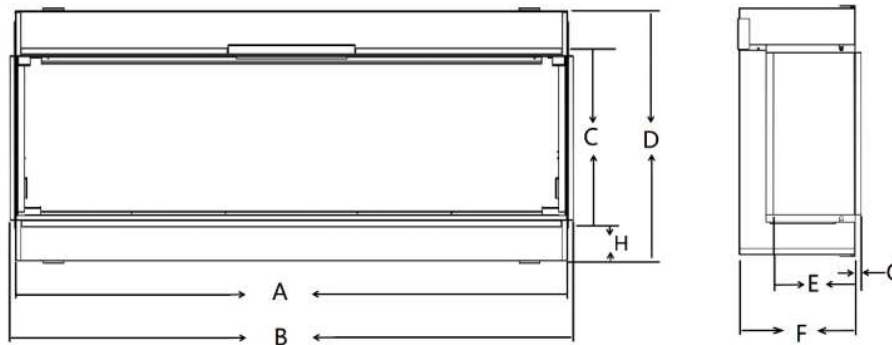

Model	A	B	C	D	E	F	G	H
750	750	782	595	804	187	301	14	99
1000	1000	1032	402	611	187	301	14	99
1250	1250	1282	402	611	187	301	14	99
1600	1600	1632	402	611	187	301	14	99
1800	1800	1832	402	611	187	301	14	99

3

Components

Before unpacking the fire inspect the carton for any damage, either caused by transport / water etc. If in doubt contact your local retailer, and do not use the appliance.

IMPORTANT


Keep any plastic packaging and small parts away from young children as they will pose a danger.



Carton Contents:

Fire Chassis (fully assembled)	Qty 1
Instruction manual	Qty 1
Remote Control and battery	Qty 1
Wall mounting bracket	Qty 1
Lower mounting brackets	Qty 2
Log set (15 pieces per set for 1800)	Qty 1
Log set (12 pieces per set for 1600)	Qty 1
Log set (11 pieces per set for 1250)	Qty 1
Log set (9 pieces per set for 1000)	Qty 1
Log set (5 pieces per set for 750)	Qty 1
Base crystals (Boxed)	Qty 1
Glass suction clamp	Qty 1


Operating Instructions

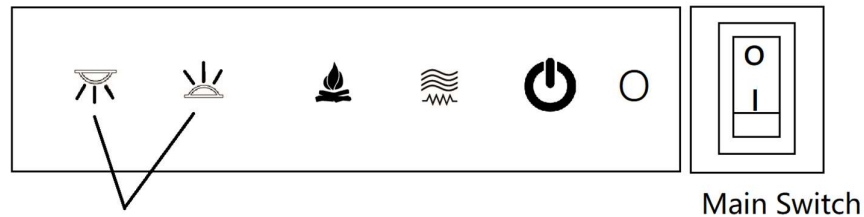Pairing the remote to the appliance



To pair the remote to the appliance, first turn on the main switch to put the fire in the standby mode. Press and hold the 2 buttons indicated for 5 seconds, then release and press the  button on the remote to complete the pairing process. To ensure the pairing process has been successful simply press the  button on the remote to turn the appliance on and off. If the appliance does not turn on / off repeat the process.

Manual Operation

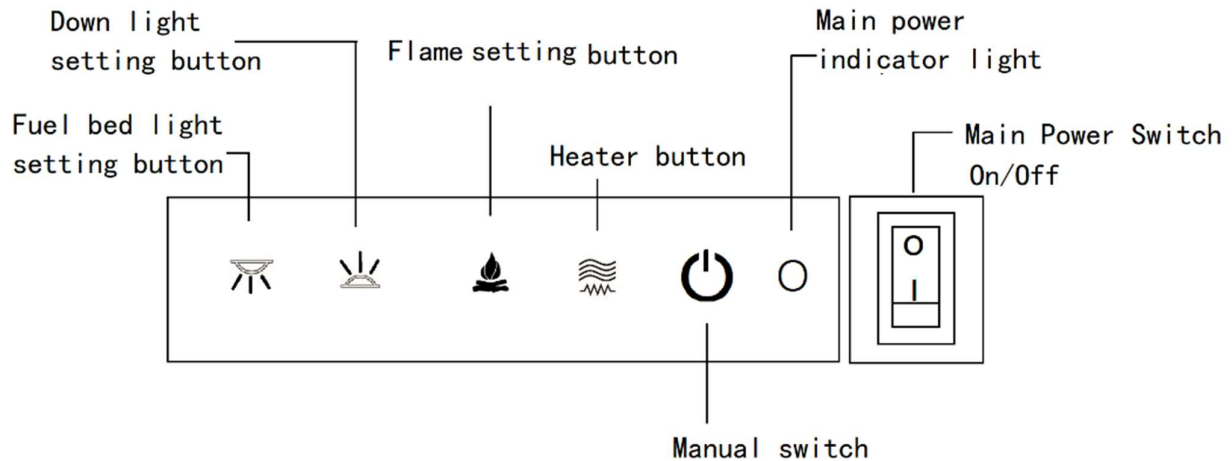

Main Power Switch

Push the main power switch to I, the main power indicator light will illuminate.

Manual Switch

Pressing the manual switch button turns the fire on and off.

Heater Button

Press the heater button once and the heater will turn on to half heat (750w). Press the heater button a second time and the heater increases to full heat (1500w). Press the heater button a third time and the heater will turn itself off.

Flame Button

Pressing the **flame button** will change the flame colour. There are four settings. Each time the button is pressed the flame colour and pattern will change colour.

Down Light Button

Pressing the **down light button** changes the colours. There are four different colour settings. There are four different modes in the down lighter setting,

- Pulse mode
- Colour change mode pulsing (ideally for a showroom setting)
- Colour change mode
- Solid state

To activate each mode simply press the down light button and hold for 3 seconds, and this indicates the mode change.


Fuel Bed Button

Pressing the **fuel bed button** changes the colours. There are fourteen different colour settings. There are fourteen different modes in the fuel bed setting,

- Pulse mode
- Colour change mode pulsing (ideally for a showroom setting)
- Colour change mode
- Solid state

To activate each mode simply press the down light button and hold for 3 seconds, and this indicates the mode change.


Remote Operation

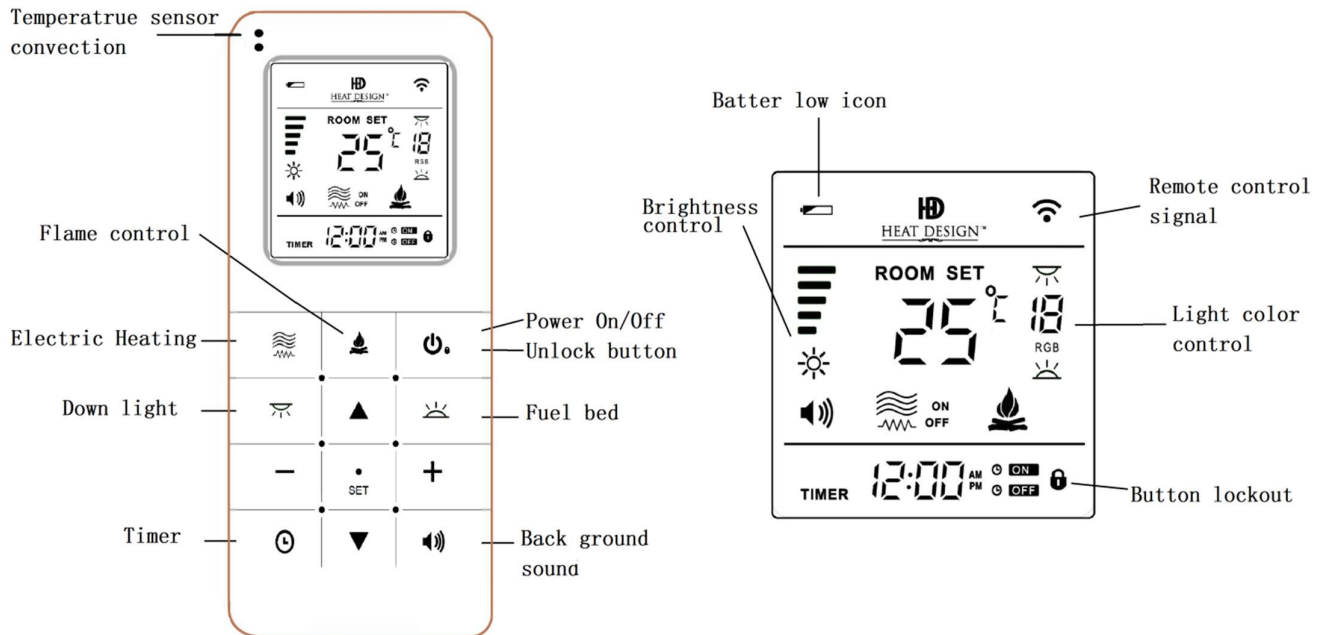





Please Note

This is a thermostatic remote control. The remote control should always be in the same room as the electric fire with the screen facing up. Please do not cover the temperature sensor. Do not leave the remote control next to the fire or a warm area such as a window, this will relay false information to the fire and prevent the fire from turning on and off the heat.

If you need to control the electric fire manually, first turn off the remote control. This will stop the remote control overriding the manual control operation.

 The remote will turn to safe mode after 10 seconds of not being used, you must press  to unlock the remote before use.





1. Turning on/off the appliance

Turn the Rocker switch  to turn on the appliance. Press  to turn on or turn off the electric fire. If the screen displays,  please press  to unlock the keypad.

2. Temperature setting

Press the ▲ and ▼ for setting temperature from 16°C to 30°C. Press ● SET the button or stop using the remote for 3 seconds and it will automatically save the desired temperature. E.g., By setting the temperature to 20°C, when room temperature is lower than 18°C the heater will automatically start. The program has been designed with ± 2 °C tolerance.




3. Electric heating control

Press  button to turn on or turn off the electric heater. When  OFF symbol appears on the screen the heating is turned off, if  ON symbol appears on the screen the heater is turned on and **half** power (750 W), and when  ON symbol appears on the screen, the heater is turned on at **full** power (1500 W)







4. SET button.

● Press SET to save any adjustment or stop operating the remote for 3 seconds and it will automatically save the desired setting selected.







5. Flame effect

Press  button and the icon will flash on the remote. The flame adjustment is now active. Press the ▲ and ▼ to adjust the flame brightness. There are 5 settings, full to no flame. Press  and  button to adjust the colours from number 1 to 4 and then ● press SET or stop operating the remote for 3 seconds and it will automatically save the desired setting selected.






6. Down light effect







Press  button. The icon will flash on the remote. Press the  and  to adjust the light brightness on the down light effect. There are 5 settings, full to no light. Press  and  button to adjust the colours from number 1 to 7 and then press  or stop operating the remote for 3 seconds and it will automatically save the desired setting selected.





7. Fuel bed effect





Press  button. The icon will flash on the remote. Press the  and  to adjust the light brightness. There are 5 settings, full to no light. Press  and  button to adjust the colours from number 1 to 13 and then press  or stop operating the remote for 3 seconds and it will automatically save the desired setting selected.

8 Timer


 




Press  button and hold for 2 seconds to set the time. The hour number will flash then press   to adjust the hours and then press the  again to change the minutes, press the  button to save the desired time.

Click the  button for set timer,   appears on the screen and then the minute section starts flashing, press buttons   to adjust the time. The time is only adjustable in 10-minute intervals. Press the  button to save the setting.

Repeat for 'turning off the timer.  . Press  twice for turning off the timer setting, then press the  button to save the setting.

If the   symbol is on the screen, press  button and hold for 2 seconds to cancel the timing, also by pressing  symbol that turns the appliance on and off the timer setting will also cancel the timer.

9 Background Volume

Press  button to adjust background volume. The three volume settings are  to  to  Press  button and hold for 2 seconds to mute. 

5

Maintenance

Always isolate the power from the mains and ensure the fire has cooled down before any cleaning or maintenance is undertaken.

Cleaning the appliance

Do not use abrasive cleaners on the appliance.

Do not spray liquids directly onto the appliance.

When cleaning the glass spray glass cleaner onto a cloth and then clean glass, buff dry with a lint free cloth.

Carefully clean the air inlet and heater area with a cloth or vacuum on a regular basis. It is important that these areas are kept free from dust / pet hairs etc.

Battery Replacement

Replace the battery when the battery indicator is empty on the remote. Ensure to replace with the correct type of button cell battery (CR2450), Ensure the battery is installed in the correct orientation + symbol facing outwards.

6

Warranty

Your Iconic electric fire comes with a two-year parts and labour warranty as standard. The warranty starts from the date of purchase, if you wish to extend the warranty for an extra 12 months you must register the appliance on <https://www.heatdesign.ie/register-iconic-gas-fire-warranty/> . To avail of your warranty, you must upload proof of purchase (Receipt) from your local approved Iconic retailer. The warranty is not transferable.

All warranties will be null and void if unauthorised repairs / modifications are made to the electric fire / accidently damage caused by transit / improper installation / serial numbers missing or modified.

Heat Design shall not be liable for any consequential loss or damage whatsoever arising from or in connection with this electric fire.

Service calls and installation errors are not covered under manufacturer warranty. A call out charge will apply.

This warranty is an addition and does not affect your statutory rights of consumers.

Heat Design

Unit 60, Hawthorn Road, Western Industrial Estate, Naas Road

Dublin 12.

Email Info@heatdesign.ie